
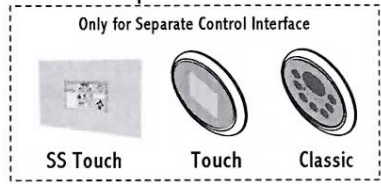
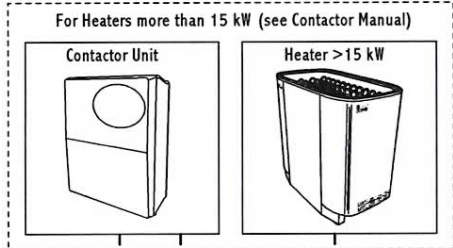
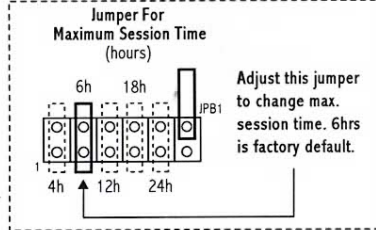
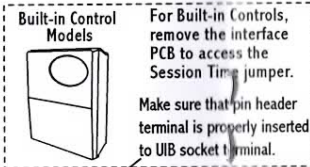
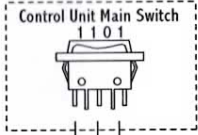


Technical Diagram

Fig. 4

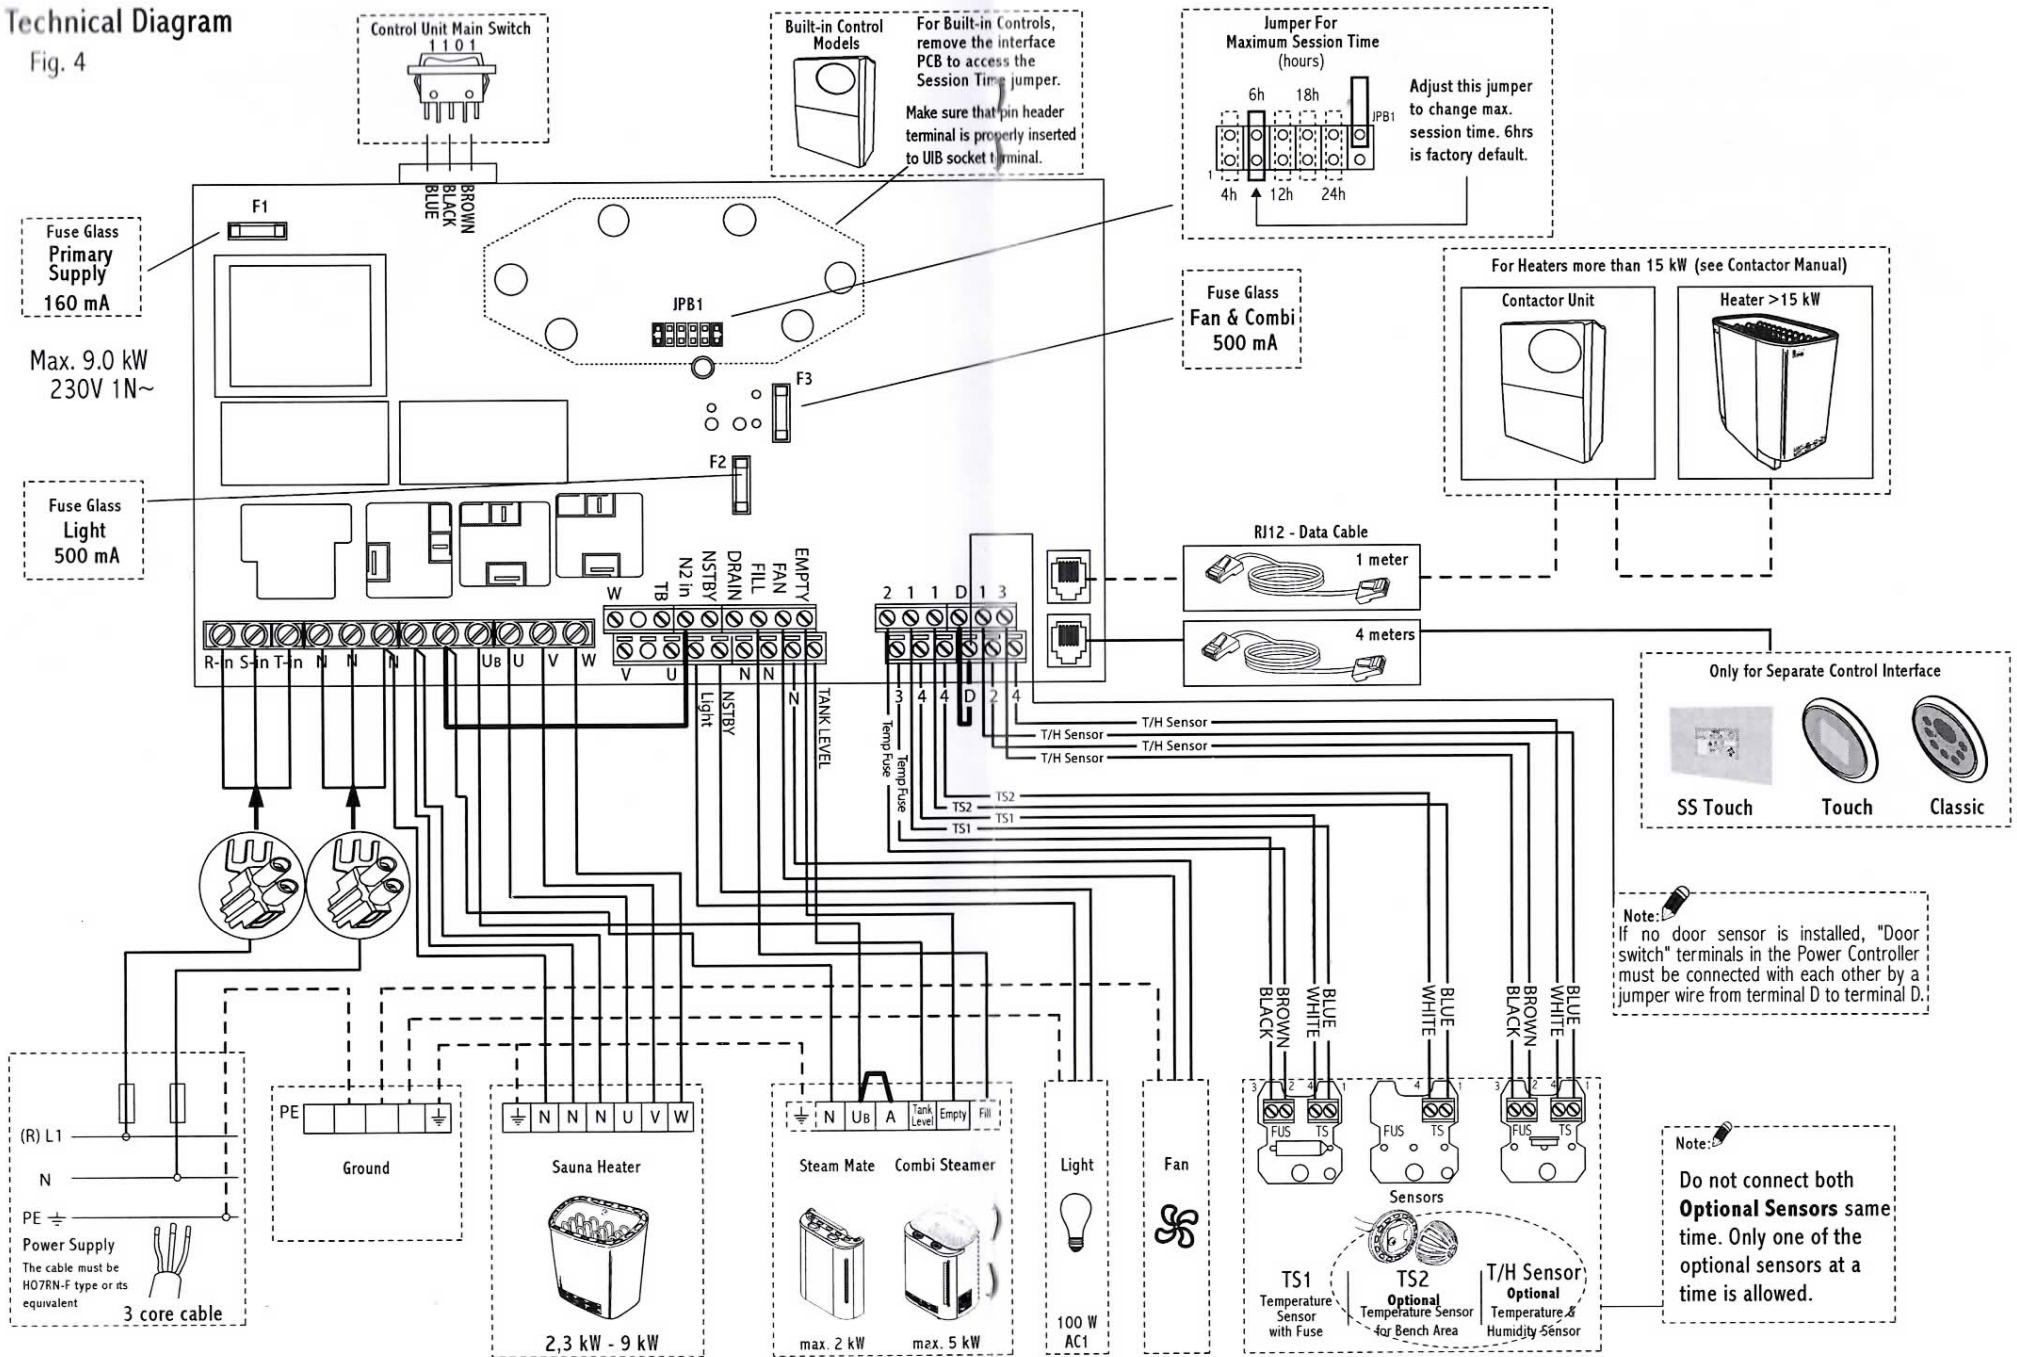

Note: If no door sensor is installed, "Door switch" terminals in the Power Controller must be connected with each other by a jumper wire from terminal D to terminal D.

Note: Do not connect both **Optional Sensors** same time. Only one of the optional sensors at a time is allowed.

Fuse Glass Primary Supply 160 mA

Max. 9.0 kW 230V 1N~

Fuse Glass Light 500 mA

